

Brand	Cartridge	Printer Model	Error Message	Solution
Canon	PG40/CL41	ip1600	Low Ink Error	Press and hold <b>RESUME</b> button (orange flashing button) for <b>10</b> seconds
Canon	PG40/CL41	ip1700	Low Ink Error	Press and hold <b>RESET</b> button (under START button) for <b>10</b> seconds
Canon	PG30/CL31 PG40/CL41	ip1800	Low Ink Error	Press and hold <b>RESUME</b> button (orange flashing button) for <b>10</b> seconds
Canon	PG30/CL31 PG40/CL41	ip2600	Low Ink Error	Press and hold <b>STOP</b> button for <b>10</b> seconds
Canon	CL41/CL51/CL52	ip6310D	Low Ink Error	Press <b>OK</b> button
Canon	PG40/CL41 PG50/CL51	mp160	E16	Press and hold <b>STOP</b> button for <b>10</b> seconds
Canon	PG30/CL31 PG40/CL41	mp190	E16	Press and hold <b>STOP</b> button for <b>10</b> seconds
Canon	PG30/CL31 PG40/CL41	mp210	Low Ink Error	Press and hold <b>STOP/RESET</b> button for <b>10</b> seconds for each error
Canon	PG210/CL211 PG210XL/CL211XL	mp240	Low Ink Error	Press and hold <b>STOP/RESET</b> button for <b>10</b> seconds
Canon	PG30/CL31 PG40/CL41	mp470	Low Ink Error	Press and hold <b>STOP/RESET</b> button for <b>10</b> seconds
Canon	PG210/CL211 PG210XL/CL211XL	mp480	Low Ink Error	Press and hold <b>STOP</b> button for <b>10</b> seconds
Canon	PG210/CL211 PG210XL/CL211XL	mp495	Low Ink Error	Press and hold <b>STOP</b> button for <b>10</b> seconds
Canon	PG30/CL31 PG40/CL41 PG50/CL51	mx300	Low Ink Error	Press and hold <b>STOP/RESET</b> button for <b>10</b> seconds
Canon	PG30/CL31 PG40/CL41 PG50/CL51	mx310	Low Ink Error	Press and hold <b>STOP/RESET</b> button for <b>10</b> seconds for each error
Canon	PG210/CL211 PG210XL/CL211XL	mx320	Check Ink U162	Press and hold <b>STOP</b> button for <b>10</b> seconds for each error
Canon	PG210/CL211 PG210XL/CL211XL	mx340	Low Ink Error	Press and hold <b>STOP/RESET</b> button for <b>10</b> seconds
Canon	PG210/CL211 PG210XL/CL211XL	mx410	Low Ink Error	Press and hold <b>STOP</b> button for <b>10</b> seconds